


MODEL 208
Front seat with semi-electric seat adjustment

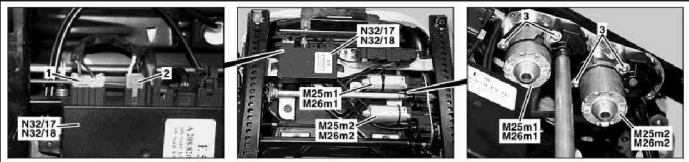

P91.29-2099-07

- 1 M25m2, M26m2 connectors
- 2 M25m1, M26m1 connectors
- 3 Screws
- M25m1 Fore/aft motor (driver-side)
- M25m2 Rear raise/lower motor (driver-side)
- M26m1 Fore/aft motor (passenger-side)
- M26m2 Rear raise/lower motor (passenger-side)
- N32/17 Semi-electric left seat adjustment control module
- N32/18 Semi-electric right seat adjustment control module

№	№	Removal, Installation		
1		Remove front seat	1	Disconnect electrical connectors
2		Expose electrical lead and disconnect corresponding connector (1 or 2) from control module	1	Only lead and connector on corresponding motor
3		Unscrew screws (3) from corresponding motor and remove motor	1	Installation: Ensure that drive gear is seated correctly
4		Install in opposite order		

№ Seat adjustment

Number	Designation	Nm	Model 208
BA91.29-P-1001-01A	Screw for seat adjustment motor	Nm	4